
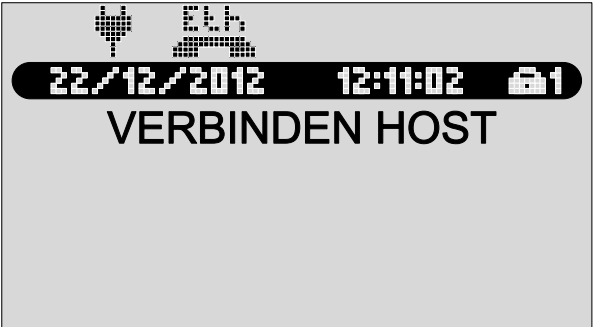





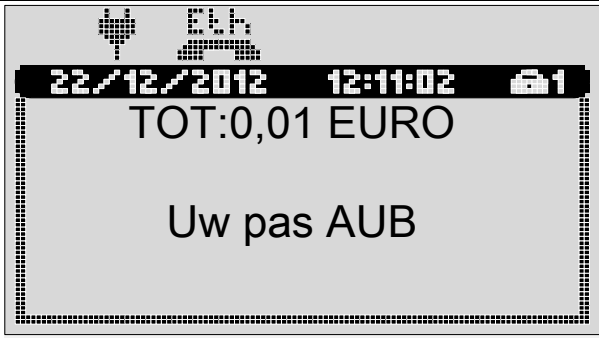





Quick Reference Guide iCT220






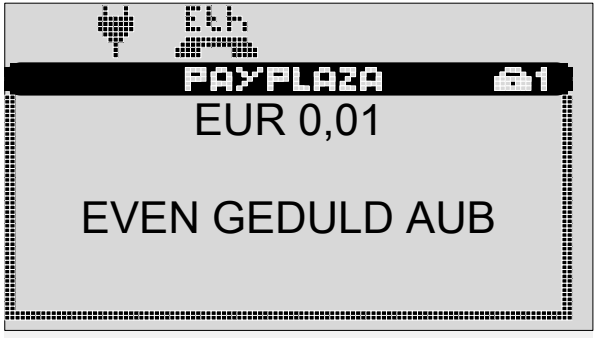

Terminal display	Actie/handeling
	<ul style="list-style-type: none">• Verwijder de kabel deksel aan de achterkant van de terminal.• Sluit alle kabels in de daarvoor bestemde poort.• Plaats de deksel terug.
	<ul style="list-style-type: none">• Zodra de ICT 250 aan de stroomtoevoer wordt aangesloten gaat de terminal vanzelf aan.
 <p>A98 [0603 - 123]</p> <p>ICT220</p> <p>F1 F2 F3 F4</p>	
 <p>22/12/2012 12:11:02</p> <p>VERBINDEN HOST</p> <p>ICT220</p> <p>F1 F2 F3 F4</p>	
 <p>22/12/2012 12:11:02</p> <p>DRUK OP F1 VOOR</p> <p>BEDRAGINVOER</p> <p>ICT220</p> <p>F1 F2 F3 F4</p>	<ul style="list-style-type: none">• Verkoper drukt op de F1 toets om een betaling te starten.

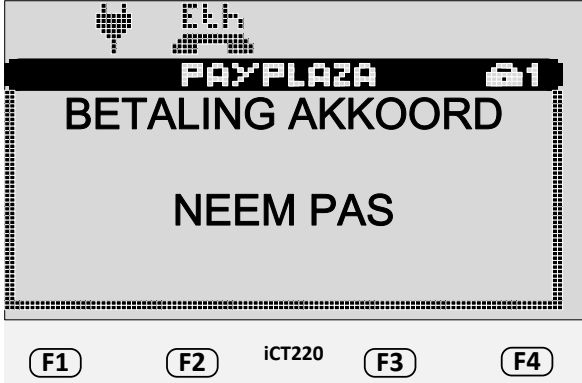


Terminal display	Actie/handeling
 <p>PAYPLAZA 0,01 EURO Voer geen PIN in</p> <p>F1 F2 ICT220 F3 F4</p>	<ul style="list-style-type: none">• U voert het gewenste bedrag in en drukt vervolgens op de  toets.
 <p>22/12/2012 12:11:02 TOT:0,01 EURO Uw pas AUB</p> <p>F1 F2 ICT220 F3 F4</p>	<ul style="list-style-type: none">• Klant ontvangt de terminal van U en stopt zijn/haar pas in de chiplezener aan de onderzijde van de terminal.
 <p>PAYPLAZA EUR 0,01 TOETS PIN + ENTER PIN: _____</p> <p>F1 F2 ICT220 F3 F4</p>	<ul style="list-style-type: none">• Klant voert zijn/haar pincode in en drukt op de  toets.
 <p>PAYPLAZA EUR 0,01 EVEN GEDULD AUB</p> <p>F1 F2 ICT220 F3 F4</p>	



Terminal display	Actie/handeling
 <p>The screenshot shows a terminal display with the PAYPLAZA logo at the top. Below the logo, the text "BETALING AKKOORD" is displayed in a large font, followed by "NEEM PAS" in a slightly smaller font. At the bottom of the screen, there are four function buttons labeled F1, F2, F3, and F4, and the text "iCT220" is centered below them.</p>	<ul style="list-style-type: none">• Klant verwijderd zijn/haar pas uit de terminal.
 <p>The screenshot shows a terminal display with the PAYPLAZA logo at the top. Below the logo, the text "GEEF TERMINAL TERUG" is displayed in a large font. At the bottom of the screen, there are four function buttons labeled F1, F2, F3, and F4, and the text "iCT220" is centered below them.</p>	<ul style="list-style-type: none">• Winkelier ontvangt terminal terug van de klant en overhandigd de klant de uitgeprinte bon.
 <p>The screenshot shows a terminal display with the PAYPLAZA logo at the top. Below the logo, the date and time "22/12/2012 12:11:02" are displayed. Below that, the text "DRUK OP F1 VOOR BEDRAGINVOER" is displayed in a large font. At the bottom of the screen, there are four function buttons labeled F1, F2, F3, and F4, and the text "iCT220" is centered below them.</p>	<ul style="list-style-type: none">• Terminal is gereed voor volgende betaling.



Uitprinten kopie bon.

Terminal display	Actie/handeling
 <p>The screenshot shows a terminal display with a date and time bar at the top: 22/12/2012 12:11:02. Below this, the text reads "DRUK OP F1 VOOR" and "BEDRAGINVOER". At the bottom, there are four function key buttons labeled F1, F2, F3, and F4, with "iCT220" printed between F2 and F3.</p>	<ul style="list-style-type: none">• Winkelier drukt op de F2 toets.
 <p>The screenshot shows a terminal display with a date and time bar at the top: 22/12/2012 12:11:02. Below this, the text reads "PAYPLAZA" and "GEEF TERMINAL TERUG". At the bottom, there are four function key buttons labeled F1, F2, F3, and F4, with "iCT220" printed between F2 and F3.</p>	<ul style="list-style-type: none">• Kopie bon wordt nu uitgeprint.
 <p>The screenshot shows a terminal display with a date and time bar at the top: 22/12/2012 12:11:02. Below this, the text reads "DRUK OP F1 VOOR" and "BEDRAGINVOER". At the bottom, there are four function key buttons labeled F1, F2, F3, and F4, with "iCT220" printed between F2 and F3.</p>	<ul style="list-style-type: none">• Terminal is gereed voor volgende betaling.



Printerrol vervangen:

- Open de printerlade zoals afgebeeld op afbeelding 1,
- Plaats de printerrol overeenkomstig zoals afgebeeld op afbeelding 2,
- Sluit de printerlade.



Afbeelding 1



Afbeelding 2

Probleem	Oplossing
Printer werkt niet	Controleer of de printerrol op de juiste manier geplaatst is volgens afbeelding 2.
Printer rolt wel papier uit maar drukt niet af	De papierrol is verkeerd om geplaatst. Draai de papierrol om.
Display geeft aan "BUITEN DIENST"	Controleer de netwerkkabel en/of uw netwerkverbinding

Helpdesk contact gegevens: +31 20 700 99 90